

LEFOO PRESSURE SWITCH

Air Compressor Pressure Switches



The LF17 pressure switches are used to regulate the tank pressure between two preset values on small electrically driven air compressors (up to 175 psig). They are available with an unloader valve, which prevents compressors from starting under load. This is a heavy duty unloader switch.

- Corrosion Resistant and Non Metallic Cover
- Ample Wiring Room
- 2 Ground Screw
- Visible Contact
- Easy to Adjust
- No Drift Pressure Setting
- Automatic Unloader Valve Standard
- No Wire Looping
- Pulsation Dampener Standard
- Captive Cover Screw

MODEL	Min ON	Max Off	Differential	Factory	Electrical Rating		Dino	Contact
	(Cut-	(Cut-Out)		Setting	120VAC	240\/AC	Pipe Fittings	Contact Arrangement
	In)PSI	PSI	PSI	PSI	120VAC	240VAC	i ittiiigs	Arrangement
1.543	40	050	05.00	445 475	0.4.4	404	1/4"	NO
LF17	40	250	25-60	145-175	24A	12A	Female	NC
							NPT	

COMPRESSED AIR SPECIALIST